




Canon PowerShot SX280 HS LCD Replacement

Replacing the LCD monitor if it's not working or cracked

Written By: Osmand A Munoz

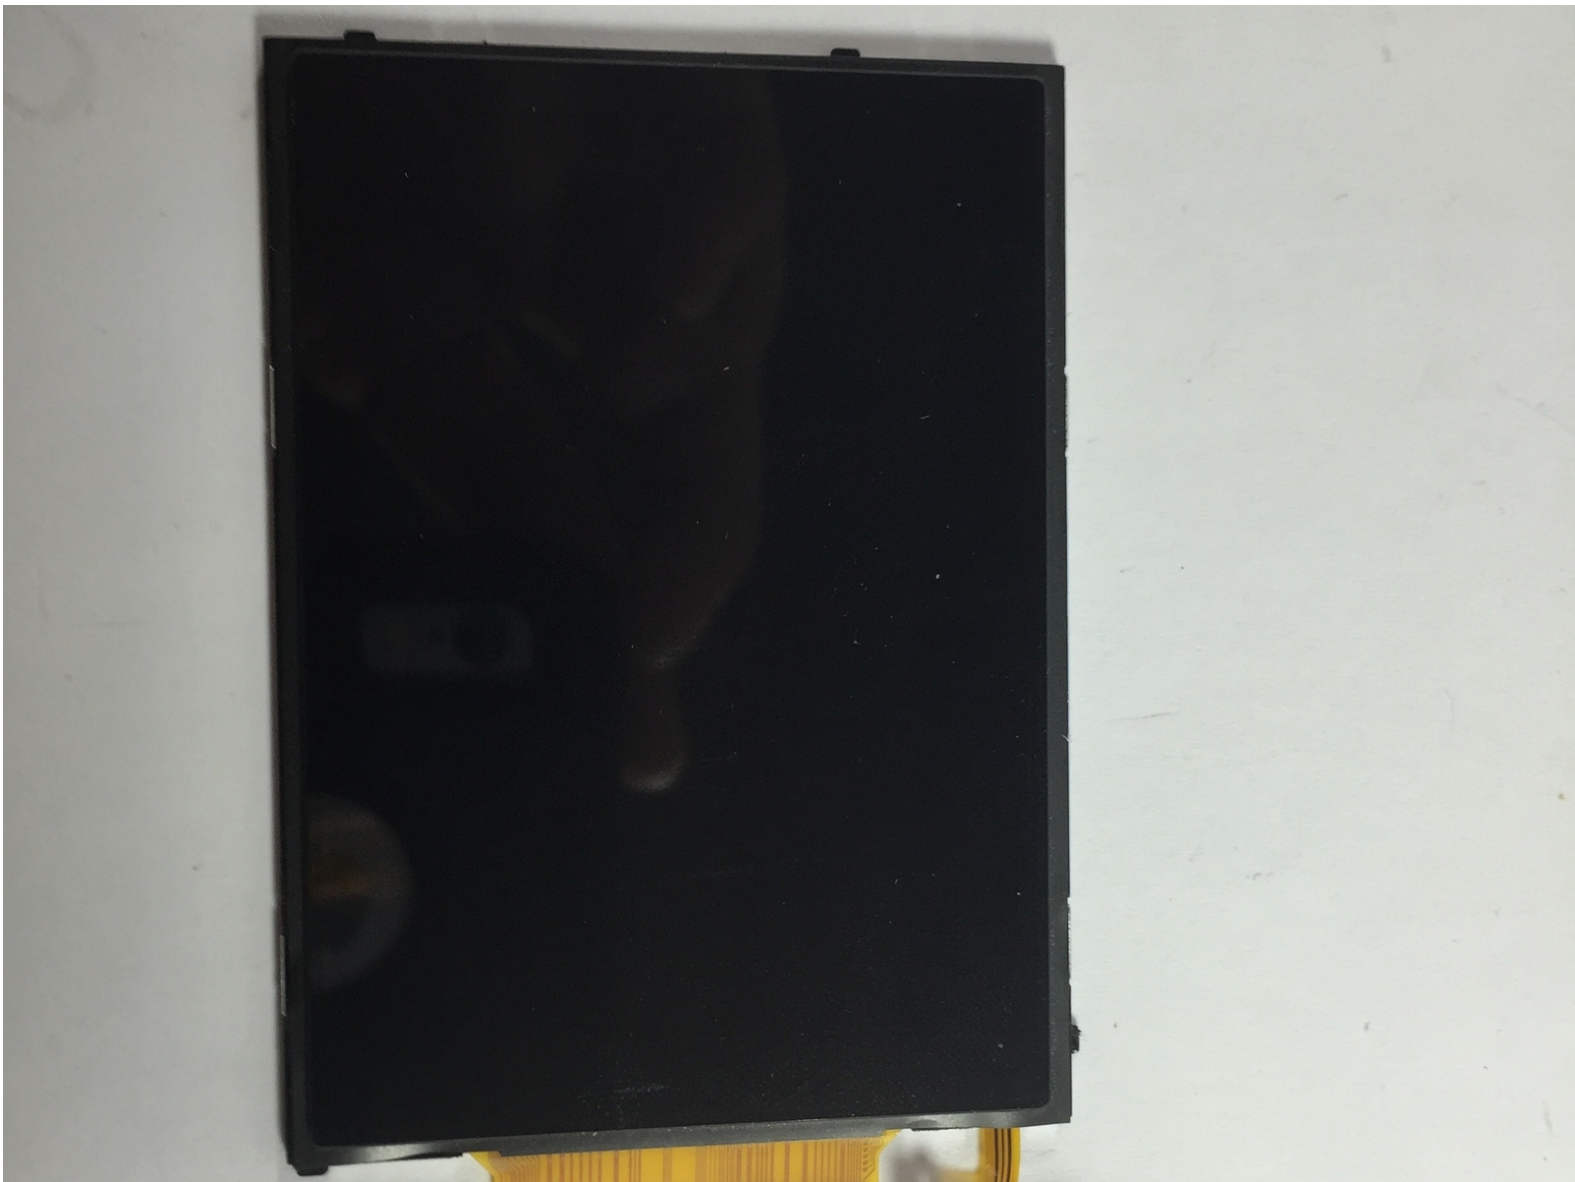

Step 1 — LCD



- Make sure the camera is off.

 Remove Battery to be safe

Step 2




- remove the two 3.4mm screw on the left side of the camera with a Phillips head #00 screwdriver.

Step 3



- remove the two 3.4mm screws from the bottom of the camera with a 3.4mm Phillips head #00 screwdriver.

Step 4

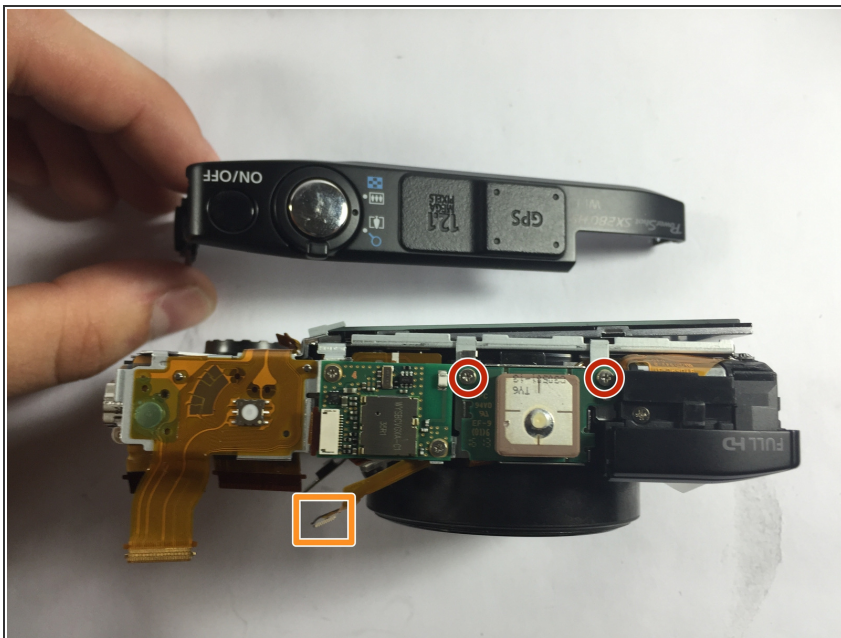


- Remove the screws where the gps because the screen is being held by them.
- ⚠ Remove the tabs that the LCD Screen is attached to
- ⓘ Carefully remove it because you don't want to ruin the camera.

Step 5




- carefully remove the screws and pop open the plastic casing
- don't pull all the way because there is a small tab to remove there. remove it then make sure nothing else is attached to it

Step 6

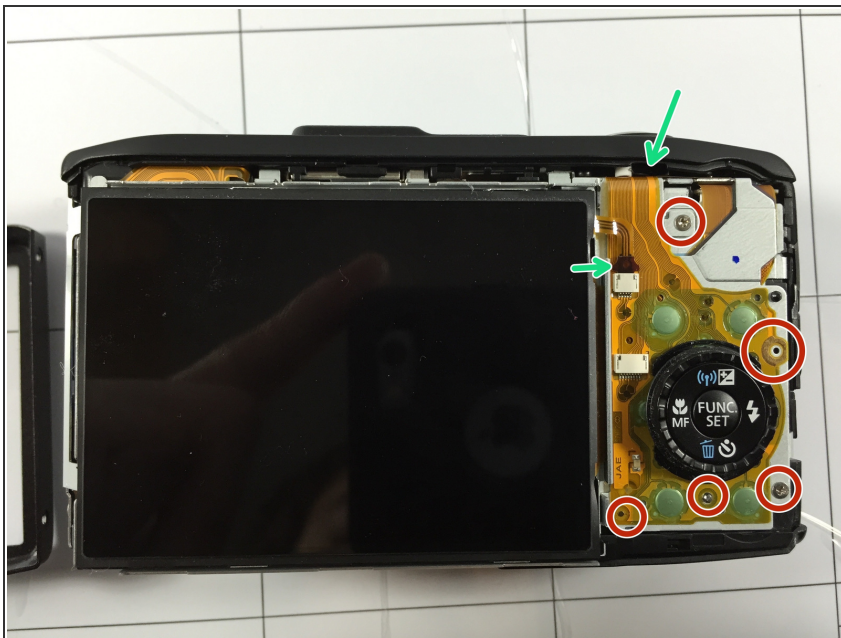


- Remove all chassis and carefully lift the LCD screen
- Remove all screws to remove the tabs from within the camera.
- Carefully lift tabs and remove slowly
- Lift screen slowly and it should come loose

Step 7

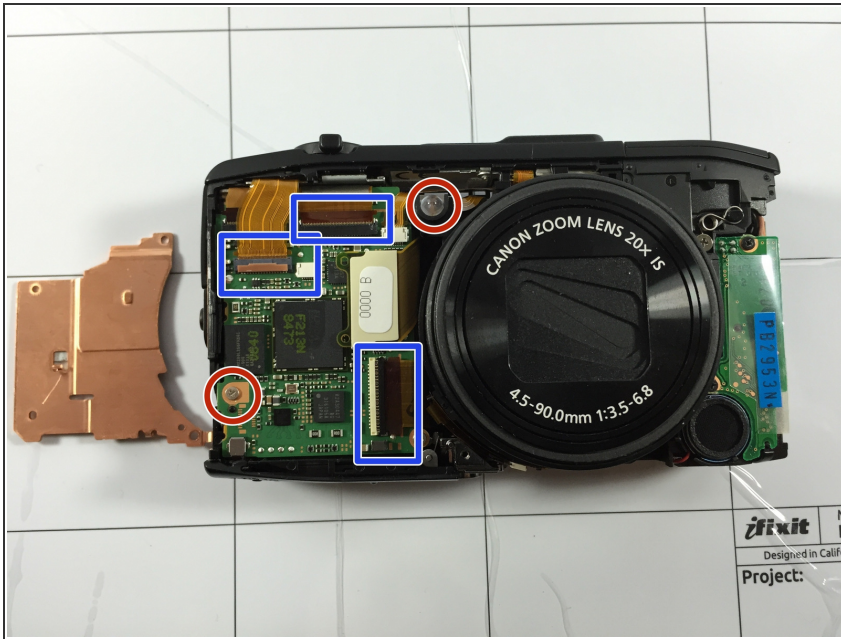

- In the blue is where the tabs are. remove these slowly to remove the LCD Screen
- Remove the screws to remove the the motherboard of the camera

Step 8

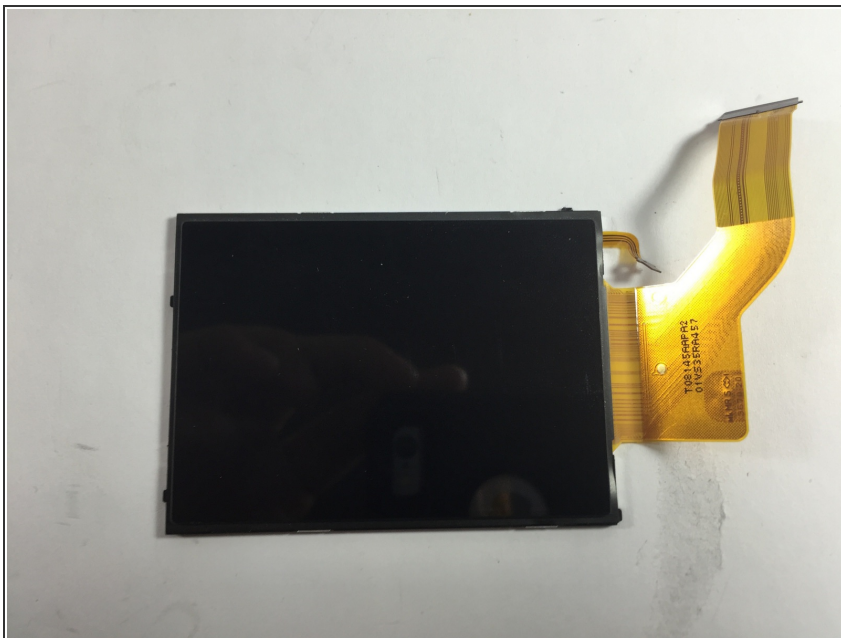

- Make sure the long strip can be attached back to the original position
- And your done with putting everything back in the reverse order

To reassemble your device, follow these instructions in reverse order.